


3. To adjust the drive chain, proceed as follows:
- Remove the cotter pin (2) and loosen the rear axle nut (3) and sleeve nut (4).
 - Turn the adjusting nuts (5) as necessary.
 - Make sure the chain adjusters on both sides are at same index mark (6) locations. Tighten the sleeve nut and rear axle nut.
 - Check the rear brake pedal free play and adjust as necessary.

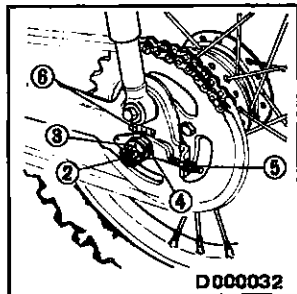

-
3. Ajuste la cadena de transmisión como sigue:
- Retire el pasador hendido (2) y afloje la tuerca (3) del eje de la rueda trasera y la tuerca de manguito (4).
 - Si es necesario efectúe el ajuste con la tuerca de ajuste (5).
 - Cerciórese que ambos ajustadores de la cadena coincidan con idéntica marca de referencia a ambos lados de la rueda. Luego apriete la tuerca de manguito y la tuerca del eje trasero.
 - Examine el juego del pedal del freno y ajústelo si es el caso.