


MAINTENANCE

Engine Oil

Check engine oil level each day before operating the motorcycle.

1. Put the motorcycle on its center stand on level ground.
2. Start the engine and let it idle for 2-3 minutes.
3. Remove the oil filler cap lid by turning the lock stud (1) 60° counterclockwise.
4. Remove the oil filler cap/dipstick (2), wipe it clean, and insert the dipstick without screwing it in. Remove the dipstick and check the oil level. The oil level should be between the upper (3) and lower (4) marks on the dipstick.

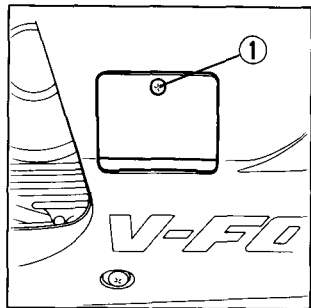

ENTRETIEN

Huile moteur

Contrôler le niveau d'huile du moteur chaque jour avant de conduire la motocyclette.

1. Placer la machine sur sa béquille centrale sur un sol horizontal.
2. Mettre le moteur en marche et le laisser tourner au ralenti pendant 2 ou 3 minutes.
3. Déposer le couvercle du bouchon de remplissage d'huile en faisant tourner le tenon de verrou (1) de 60° dans le sens contraire des aiguilles d'une montre.
4. Retirer la jauge/bouchon de remplissage d'huile (2), l'essuyer et la remettre sans la visser. Retirer à nouveau la jauge et vérifier le niveau d'huile. Le niveau d'huile doit se trouver entre les repères de niveau supérieur (3) et inférieur (4) sur la jauge.

