


5. Take out the reserve tank from the bracket and drain the coolant from it through the filler cap opening.

NOTE: Drain the coolant into a clean container for reuse. Scheduled coolant replacement is every 36,000 km (22,500 miles).

6. Remove the radiator cap.
7. Drain the coolant from the engine; remove the drain bolts (4) at the water pump cover and cylinder heads.
8. Reinstall the drain plug and bolts. Fill the radiator with the recommended coolant through the filler neck.

Cooling system capacity: 3.2 lit. (3.4 U.S. qt., 2.8 Impr. qt.)

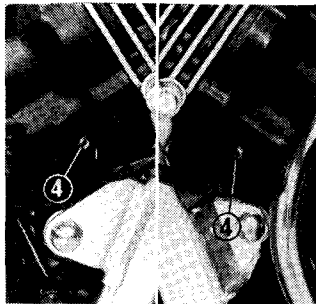

-
5. Déposer le réservoir auxiliaire du support et vidanger le liquide de refroidissement du réservoir par l'ouverture du bouchon.

NOTE: Vidanger le réfrigérant dans un récipient propre afin de pouvoir le réutiliser. Renouveler le réfrigérant tous les 36.000 km.

6. Déposer le bouchon du radiateur.
7. Vidanger le réfrigérant du moteur. Déposer les boulons de vidanger (4) sur le couvercle de la pompe à eau et de la culasse.
8. Reposer le bouchon et les boulons de vidange. Remplir le radiateur du réfrigérant recommandé par le col de remplissage. Contenance en liquide du circuit de refroidissement: 3,2 litres

