Switches

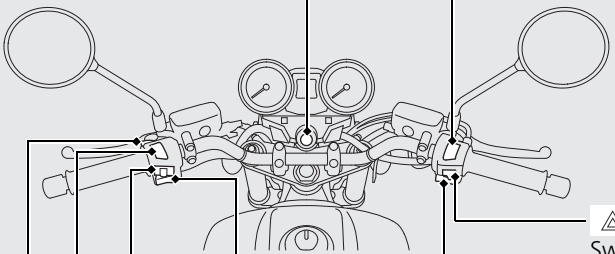

Engine stop switch
Should normally remain in the (Run) position.
▶ In an emergency, switch to the (Off) position (the starter motor will not operate) to stop the engine.

Hazard switch
Switchable when the ignition switch is on. Can be turned to off regardless of the ignition switch position.
▶ The signals continue flashing with the ignition switch in OFF or LOCK after the hazard switch is on.

Start button
Headlight turns off when operating the starter motor.

Horn button

Turn signal switch
▶ Pressing the switch turns the turn signal off.

Headlight dimmer switch
- : High beam
- : Low beam

Passing light control switch
Flashes the high beam headlight.