



4. Remove the bolts.
5. Remove the prong from the grommet.
6. Remove the right under cowl.

(VFR1200X)

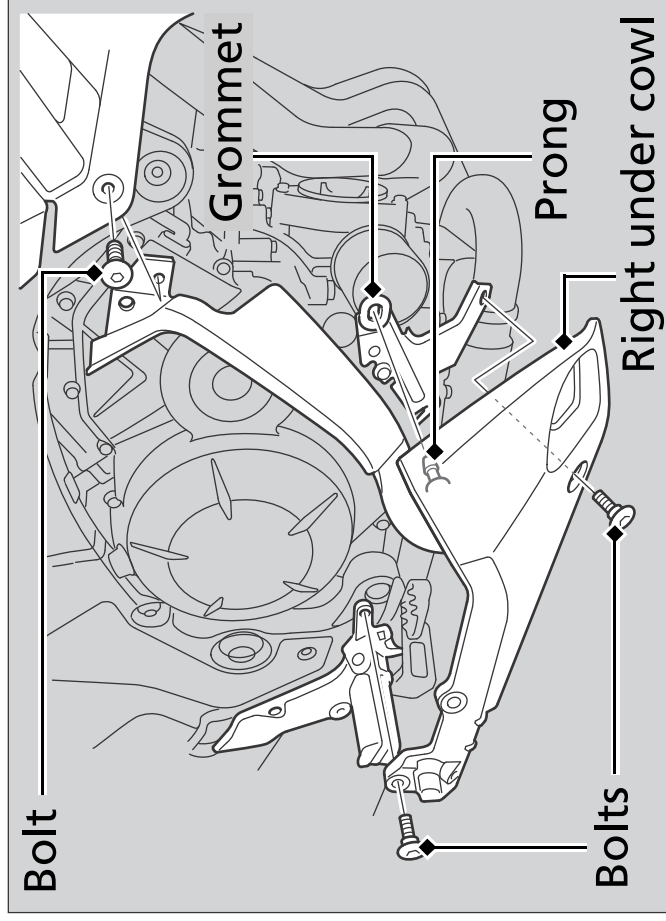

(VFR1200XD)

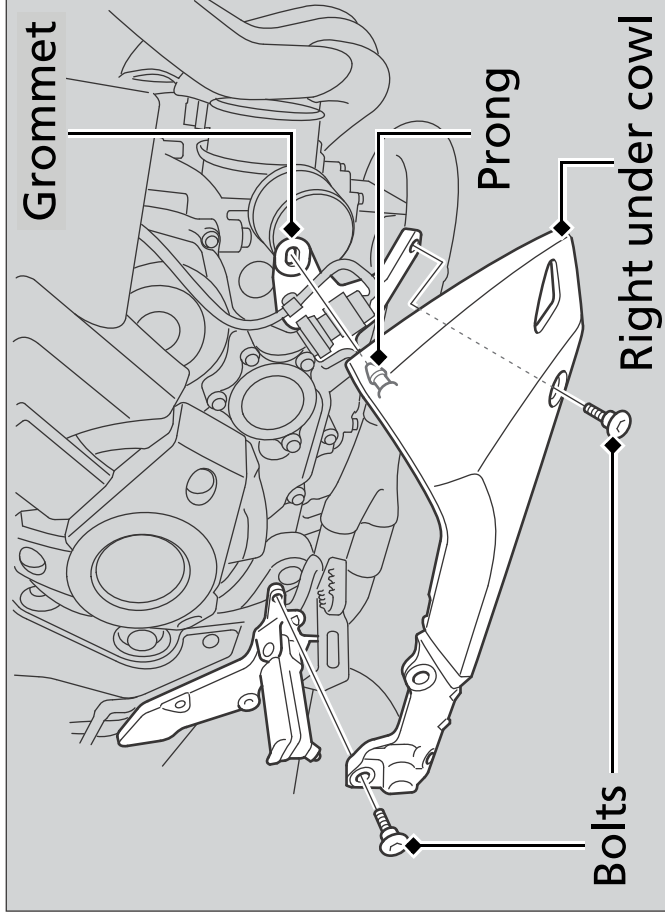

Installation

Install the parts in the reverse order of removal.