




Install the spring on the shock absorber damper rod.
Install the spring seat stopper while compressing the spring by hand.

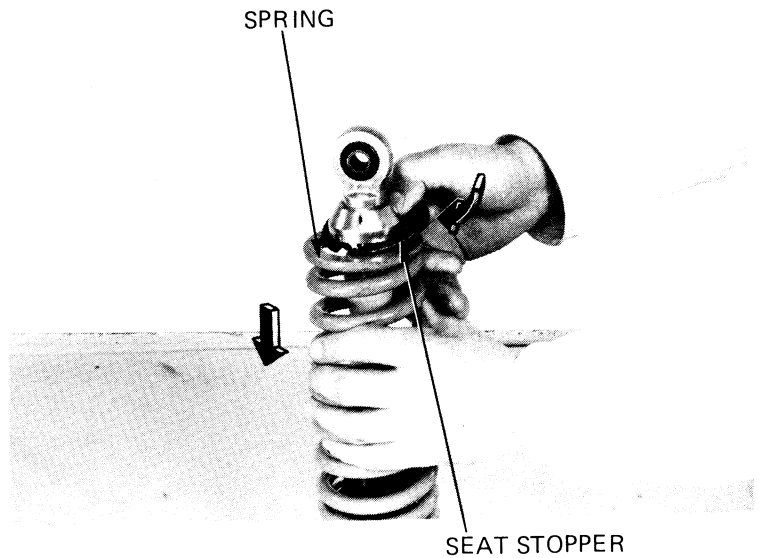


Adjust the spring length by turning the adjuster:

Standard length: 10.0 mm (0.4 in)

CAUTION:

Do not allow the spring length to exceed the above limits.

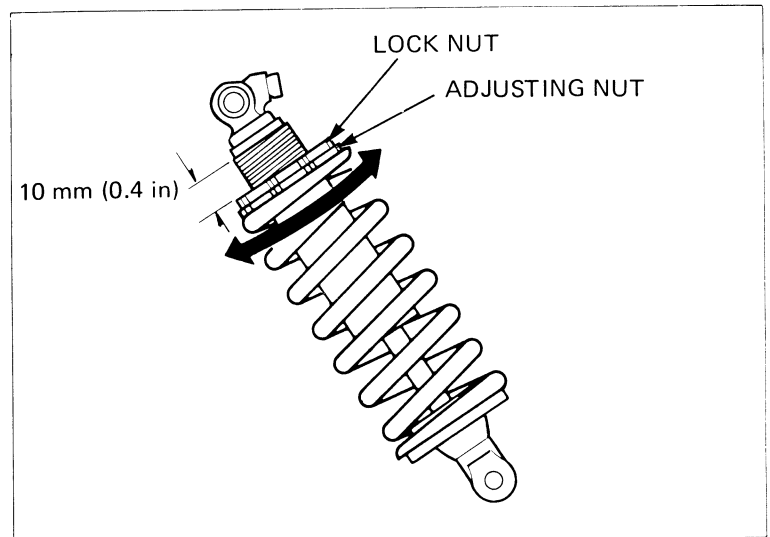

SHOCK ABSORBER INSTALLATION

Install the rear shock absorber and reservoir.

TORQUES:

Shock absorber upper/lower bolts:

38–48 N·m (3.8–4.8 kg·m, 27–35 ft·lb)

Reservoir bolt:

8–12 N·m (0.8–1.2 kg·m, 6–9 ft·lb)

