


If You Have a Flat Tire

(CB1000R)

Removal

RIGHT FRONT

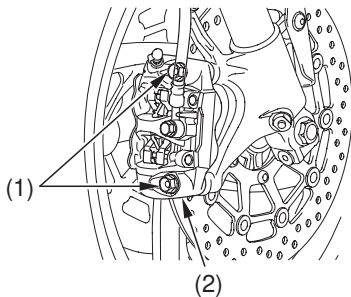

(1) fixing bolts

(2) brake caliper assembly

1. Park your motorcycle on a firm, level surface.
2. Support the motorcycle securely and raise the front wheel off the ground using a safety stand or a hoist.
3. Remove the fixing bolts (1) and remove the right and left caliper assemblies (2) from the fork legs.
 - To avoid damage to the brake hose during removal, support the caliper assembly so that it doesn't hang from the hose. Do not twist the brake hose.
 - Avoid getting grease, oil, or dirt on the disc or pad surfaces. Any contamination can cause poor brake performance or rapid pad wear after reassembly.

(cont'd)