


Install and tighten the radiator mounting bolt.
Connect the fan motor sub-harness 2P (Natural) connector.



Install the main wire harness guide onto the left mounting boss as shown.

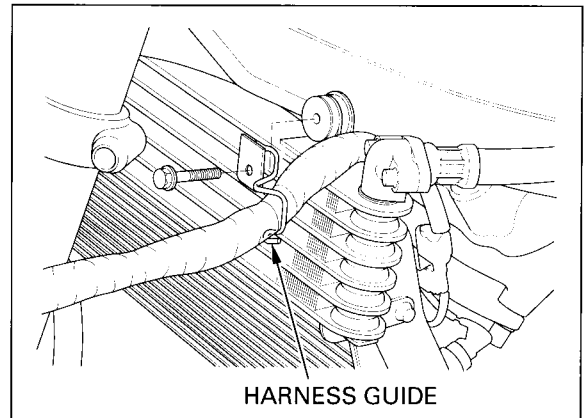

Install and tighten the oil cooler upper mounting bolts.

Install the following:

- Wind guard (page 2-14)
- Upper cowl cover/inner panel (page 2-7)



Install the new gasket into the muffler.

