


Route the brake hose properly, tighten the brake hose guide bolts to the specified torque.

TORQUE: 12 N·m (1.2 kgf·m , 9 lbf·ft)

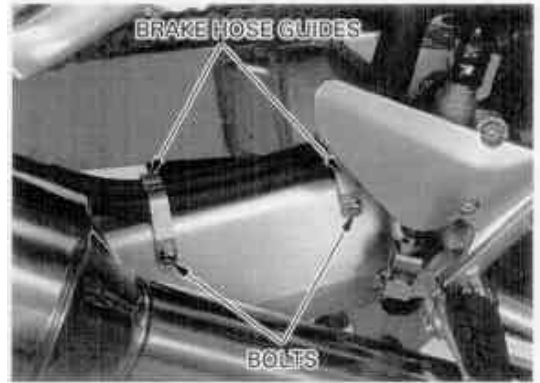

Install the drive chain cover and tighten the bolts.

Install the rear wheel (page 14-8).

