


Drive Chain

Drive chain adjustment:

Monthly, check the drive chain tension; also for harshness of operation from neglected lubrication.

1. Place the motorcycle on its center stand to raise the rear wheel off the ground. Shift the transmission into neutral.
2. Move the chain (1) up and down with your fingers at a point midway between the sprockets. Adjust slack so that it is approx. 10–20mm ($\frac{1}{2}$ – $\frac{3}{4}$ in.).

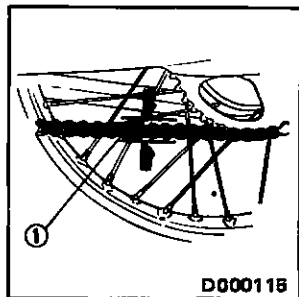

Cadena de la transmisión

Ajuste de la cadena de transmisión:

Inspeccione mensualmente la tensión de la cadena de transmisión y lubríquela convenientemente.

1. Apoye la motocicleta en el soporte central y separe del suelo la rueda trasera. Pase el cambio al engranaje de neutro.
2. Mueva la cadena hacia arriba y abajo, empujándola con un dedo a mitad de la distancia entre las dos catalinas. Ajuste la deflexión a 10 – 20 mm aproximadamente.