



9. Tighten the axle pinch bolts on the right fork leg to specified torque:  
22 N·m (2.2 kgf·m , 16 lbf·ft)
10. Measure the clearance ( 5 ) between each surface of the left brake disc and the left brake caliper body (not brake pads) with a 0.7 mm (0.028 in) feeler gauge ( 6 ) (see illustration).

If the torque wrench was not used for installation, see your Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.

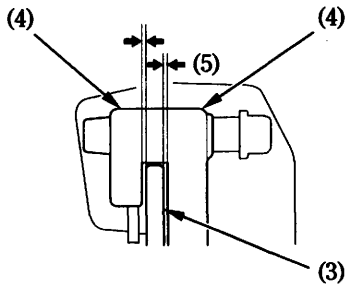

(3) Brake disc  
(4) Brake bracket

(5) Clearance

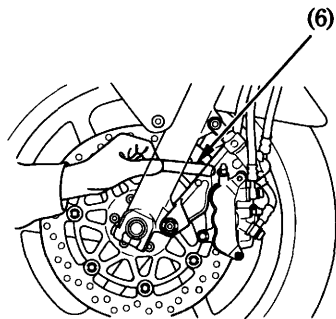

(6) Feeler gauge