


Measure the clearance (6) between each surface of the brake disc (7) and the caliper holder (8) with a 0,7 mm (0,028 in) feeler gauge (9) (see illustration).

If the gauge inserts easily, tighten the right and left axle pinch bolts (3) to the specified torque.

Axle pinch bolt torque :

22 N·m (2.2 kgf·m , 16 lbf·ft)

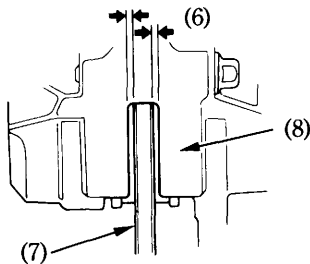


(6) Clearance
(7) Brake disc

(8) Caliper holder

▲WARNING

* If a torque wrench is not used for this installation, see your authorized Honda dealer as soon as possible to verify proper assembly.

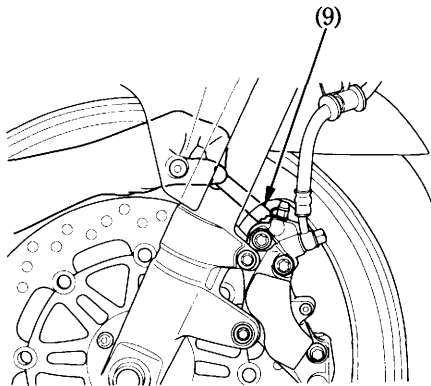

(9) Feeler gauge