WHEEL REMOVAL


Refer to the Safety Precautions on page 55.

Front Wheel Removal

- 1. Raise the front wheel off the ground by using a chain hoist.
- 2. Remove the right and left caliper assembly (1) from the fork leg by removing the fixing bolts (2).

To avoid damage to the brake hose, support the caliper assembly so that it doesn't hang from the hose. Do not twist the brake hose.

Avoid getting grease, oil, or dirt on the disc or pad surfaces. Any contamination can cause poor brake performance or rapid pad wear after reassembly.

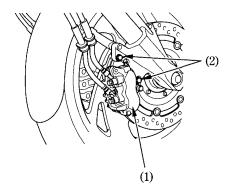

- (1) Brake caliper assembly
- (2) Fixing bolts