

HANDLEBAR


RIGHT HANDLEBAR

REMOVAL

Hold the handlebar weight and remove the mounting screw and the weight.



Disconnect the front brake light switch connectors. Remove the two bolts, holder and the front brake master cylinder assembly. Remove the two screws and upper throttle housing. Remove the two screws and right handlebar switch.

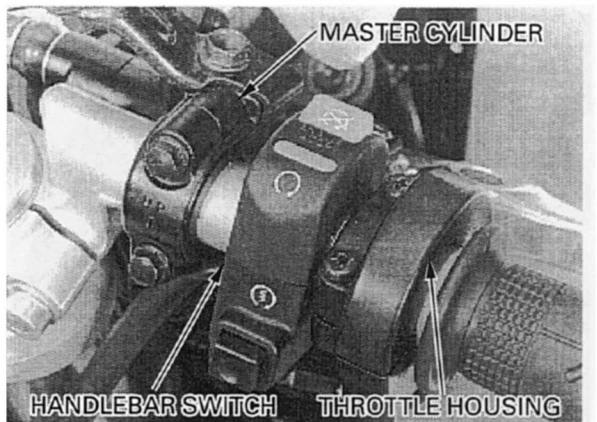

Loosen the handlebar pinch bolt, and remove the stopper ring and handlebar from the fork.



Remove the throttle grip pipe from the handlebar.

INSTALLATION

Apply grease to the throttle grip pipe flange and install the throttle grip pipe onto the handlebar.

