

TIRE ASSEMBLY

Clean the rim bead seat and flanges.

Install the tire on the rim from the opposite side of the valve stem.

Coat the rim flanges and tire bead with a tire mounting lubricant.

CAUTION:

Do not use silicone lubricant.

Inflate the tire to seat the tire bead.

CAUTION:

Be careful not to inflate the tire with more than 1.2 kg/cm² (17 psi) of air.

If the tire does not seat on the rim with 1.2 kg/cm² (17 psi) of air pressure, release the air from the tire and apply tire lubricant to the tire bead and bead seating surface of the rim.

Then, inflate the tire with air again.

Deflate the tire. Wait 1 hour and inflate the tire to the specified pressure.

	Recom- mended pressure	Min. pressure	Max. pressure	Standard tire circum- ference
Front	3.3 psi (23 kPa, 0.23kg/cm ²)	2.8 psi (20 kPa, 0.2kg/cm ²)	3.7 psi (26 kPa, 0.26kg/cm ²)	1,900 mm (74.8 in)
Rear	2.4 psi (17 kPa, 0.17kg/cm ²)	2.0 psi (14 kPa, 0.14kg/cm ²)	2.8 psi (20 kPa, 0.2kg/cm ²)	1,745 mm (68.7 in)

NOTE:

The rear tires must have the same circumference for proper handling.




Check for air leaks and install the valve cap.

FRONT WHEEL INSTALLATION

Clean the axle shaft and holder.

Install the holder with the "UP" mark facing upward.

Install the axle holder nuts but do not tighten at this time.

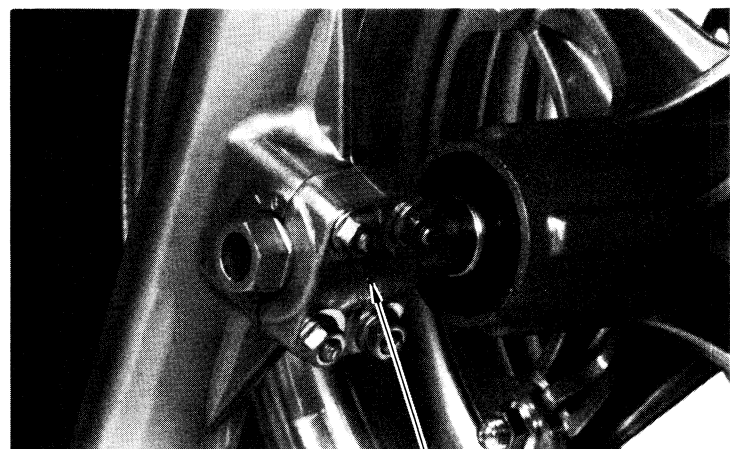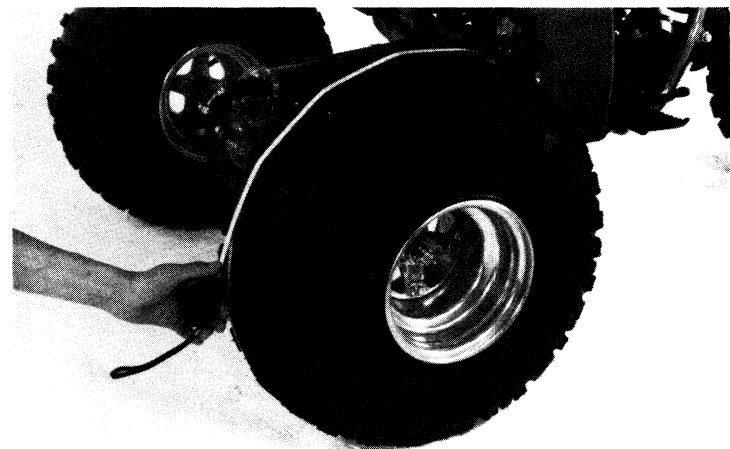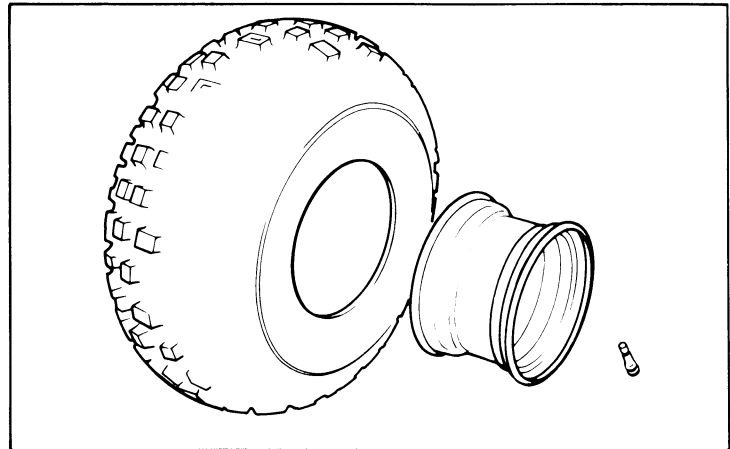

**AXLE HOLDER
 "UP" MARK**