

Rear Suspension Spring Pre-load Adjustment

Refer to *Safety Precautions* on page 122.


The spring pre-load adjuster knob has 35 spring pre-load positions (clicks) or more for different load or riding conditions.

To adjust the spring pre-load, remove the right side cover (page 135) and turn the adjuster knob.

To adjust to the standard position:

1. Turn the spring pre-load adjuster knob counterclockwise until it will no longer turn (lightly seats).
This is the full **LOW** setting.
2. Turn the adjuster clockwise for 1 click. This is the standard position.

RIGHT SIDE

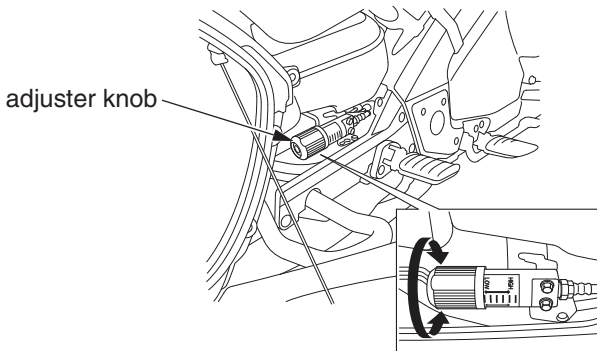

To Reduce Spring Pre-load (LOW):

For a light load and smooth road conditions, turn the adjuster counterclockwise toward **LOW**.

To Increase Spring Pre-load (HIGH):

For a firmer ride and rough road conditions, turn the adjuster clockwise toward **HIGH**.