

WHEELS/TIRES

NOTE:

Tire pressure should be checked when the tires are COLD.

Check the tire pressure with the tire pressure gauge.

RECOMMENDED TIRE PRESSURE:

Driver only:

Front: 250 kPa (2.50 kgf/cm², 36 psi)

Rear: 290 kPa (2.90 kgf/cm², 42 psi)

Driver and passenger:

Front: 250 kPa (2.50 kgf/cm², 36 psi)

Rear: 290 kPa (2.90 kgf/cm², 42 psi)


Check the tires for cuts, embedded nails, or other damage.

Check the front and rear wheels for trueness (refer to section 13 and 14).

Measure the tread depth at the center of the tires. Replace the tires when the tread depth reaches the following limits.

MINIMUM TREAD DEPTH: Front: 1.5 mm (0.06 in)

Rear: 2.0 mm (0.08 in)

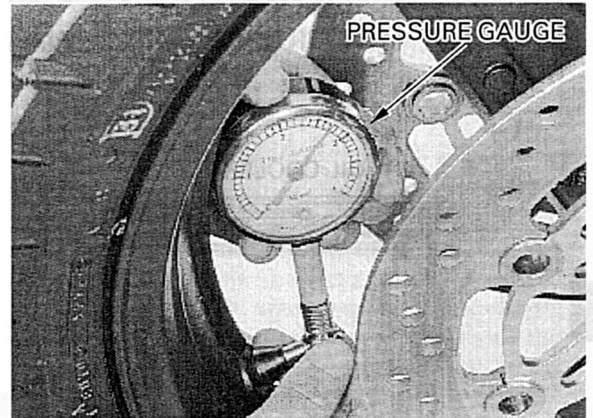

STEERING HEAD BEARINGS

NOTE:

Check that the control cables do not interfere with handlebar rotation.

Raise the front wheel off the ground and support the motorcycle securely.

Check that the handlebar moves freely from side to side.

If the handlebar moves unevenly, binds, or has vertical movement, inspect the steering head bearings (section 13).

